



Vanco PA66AMP URC Driver
V1.0 rev20160418

Overview

This document details how to integrate a Vanco PA66AMP Amplifier into URC systems.

Ensure that you have setup and can control your Vanco PA66AMP Amplifier. This driver communicates with the Vanco PA66AMP Amplifier using RS-232, and requires that it be connected to the URC system in order to control it.

Installation

- Add the URC driver to Accelerator's "CustomDrv" folder, located in Documents\Universal Remote Control, Inc\URC Accelerator.
- Add the driver to your project. Select the driver from RS232 Database for Serial control. **(Accelerator STEP 4)**
- Select the connected RS232 Port. **(Accelerator STEP 5)**
- Configure the inputs and outputs under "INPUTS". **(Accelerator STEP 7)**
- Accelerate menus. **(Accelerator STEP 10)**
- Configure macros, device specific functions are available for each output. **(Accelerator STEP12)**
- Download and Test!

