

Specifications		
Connectivity	Bluetooth 5.0	
Power	802.3af PoE	
Power consumption	1.9W (max)	
Sample rate	48kHz	
Bit depth	24-bit	
Protocol	Dante, AES67	
Operation temperature	-5° ~ 55°C	23°F ~ 131°F
Storage temperature	-25° ~ 70°C	-9°F ~ 158°F
Dimensions (W x H x D)	115mm x 34mm x 28mm	4.5in x 1.3in x 1.1in
Weight	70g	2.5oz



## Bluetooth Dante Audio Input Adapter

Please read these instructions carefully before use and keep this guide for future reference. The part number, serial number, and invoice must be available when requesting support.

### Package contents:

- (1) BDBTIN Dante audio adapter
- (1) Product manual

### Vanco Tech Support

Phone: 800-626-6445

Email: [techsupport@vanco1.com](mailto:techsupport@vanco1.com)

Web: [www.vanco1.com/tech-support](http://www.vanco1.com/tech-support)



BDBTIN Product Manual

©2026 Vanco International LLC



## Panel Descriptions

1	Dante network communication RJ45 port	Solid green: system ready and online
		Flashing green: connected to Dante controller
		Flashing amber: data transfer
2	Bluetooth	Backlit Bluetooth pairing button



## Bluetooth Pairing Process

After the device is powered on, press the pairing button. The blue backlight of the button flashes quickly, indicating that the device is in the state of being connected.

After the Bluetooth device is successfully paired, the blue backlight of the button will always be on.

If the Bluetooth is not connected to any device within one minute, the blue backlight will turn off, the Bluetooth is turned off, and the pairing button needs to be pressed again.

In the power-on state, press and hold the button for more than 5 seconds, the backlight will turn off. At this time, the pairing will be reset, and the Bluetooth will return to the initial state.

## Connection Diagram

1	Connect the Dante AVIO adapter's RJ45 into a PoE port of the switch with a known working Cat5e/6 cable.
	If your switch does NOT have PoE, use a PoE injector between the adapter and the switch.
2	Check the RJ45 ports on the adapter and switch to confirm functionality.
3	Download and open Dante Controller, or other 3rd party software, to locate, name, and route the audio.

