

Specifications		
Connectivity	HDMI ARC female port	
Power	802.3af PoE	
Power consumption	1W (max)	
Sample rate	44.1 / 48 / 96kHz	
Bit depth	24-bit	
Protocol	Dante, AES67	
Operation temperature	-5° ~ 55°C	23°F ~ 131°F
Storage temperature	-25° ~ 70°C	-9°F ~ 158°F
Dimensions (W x H x D)	114mm x 48mm x 26mm	4.5in x 2in x 1in
Weight	175g	6oz



HDMI ARC Output Dante Audio Adapter

Please read these instructions carefully before use and keep this guide for future reference. The part number, serial number, and invoice must be available when requesting support.

Package contents:

- (1) BDARCOUT Dante audio adapter
- (1) Product manual

Vanco Tech Support

Phone: 800-626-6445

Email: techsupport@vanco1.com

Web: www.vanco1.com/tech-support




BDARCOUT Product Manual

©2026 Vanco International LLC



Panel Descriptions

1	Dante network communication RJ45 port	Solid green: system ready and online
		Flashing green: connected to Dante controller
		Flashing amber: data transfer
2	5V DC	USB-C power port (5V, 3A)
3	HDMI ARC input	Only supports 2ch ARC
4	Reboot	Press and hold for 5 seconds to reset/reboot

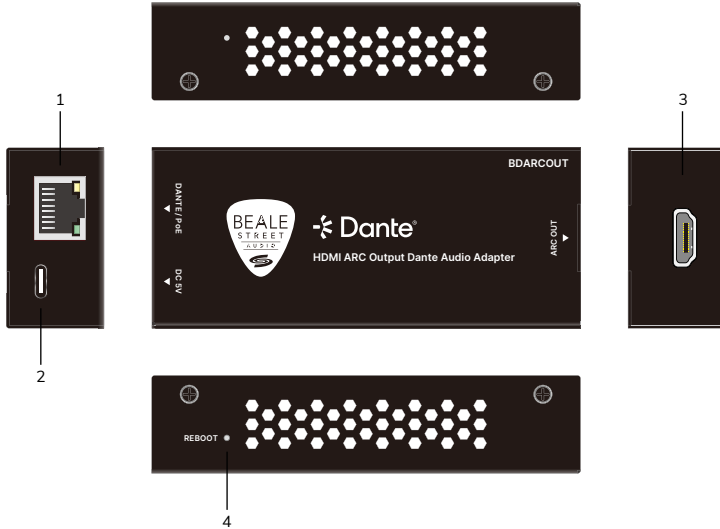

Connection Diagram

1	Connect the Dante AVIO adapter's RJ45 into a PoE port of the switch with a known working Cat5e/6 cable.
	If your switch does NOT have PoE, use a PoE injector between the adapter and the switch or use the USB-C port on the device connected to a power block or USB port for power.
2	Connect the HDMI ARC port on a smart TV.
3	Connect the adapter's HDMI ARC port to the HDMI ARC port on an ARC amplifier, or pre-amplifier.
4	Check the RJ45 ports on the adapter and switch to confirm functionality.
5	Download and open Dante Controller, or other 3rd party software, to locate, name, and route the audio.

